



## Installation Instructions




Prepare the cable according to the dimensions shown above. Be careful not to damage the center conductor. Tin center conductor.




Place contact on cable center conductor so it butts against cable dielectric. Center conductor should be visible through inspection hole. Solder contact.



Push cable assembly forward until contact snaps into place in insulator.

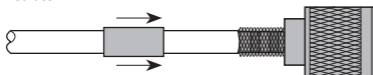

Slide outer ferrule over braid and up against connector body.

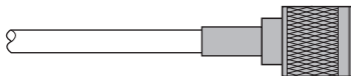

Crimp outer ferrule using Die Set Cavity.



✓ RoHS Compliant



Made in China